



Alldaymall A88X Back Cover

PREREQUISITE

Written By: Drhaber



INTRODUCTION

PREREQUISITE




TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Alldaymall A88X Back Cover




- Using a plastic opening tool, carefully pry the device apart. Make your way around the entire perimeter of the device and carefully place the two panels next to each other.


 After the panels are separated, watch out for the speaker on the rear panel as it's wire is rather short.

 When separating the panels keep an eye out for the power button and volume rocker as they can be dislodged.

Step 2

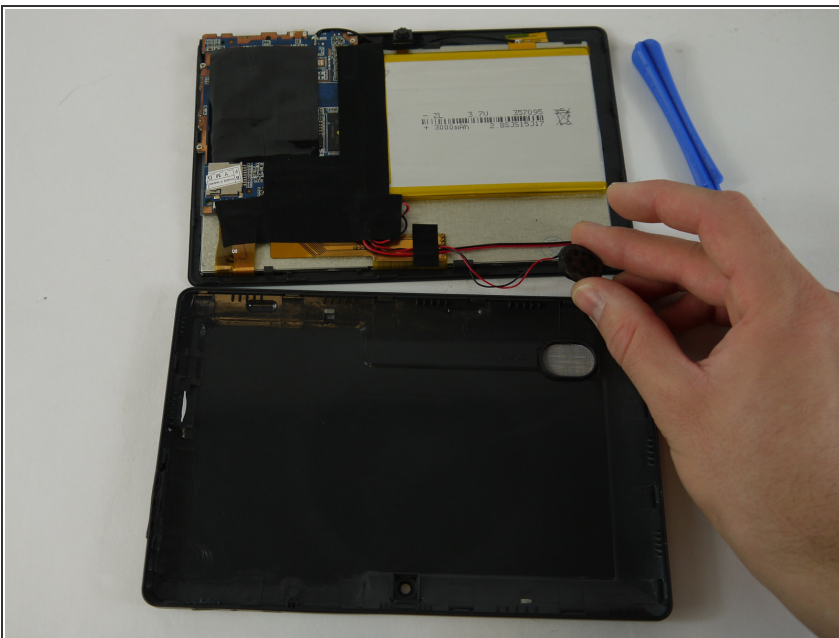

- Grip the speaker from the sides with your fingers or a pair of tweezers and slowly begin to remove it from the rear panel.

 When removing the speaker, make sure not to disconnect the wires in any way.

- After the speaker has been removed, place the rear panel aside.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 11:18:22 PM.